

Digital Thermometer with Internal & External temperature probes GE4650-000

Digital thermometer for monitoring refrigerators, freezers, water baths, heating blocks and incubators.

FEATURES

- Internal/External temperature display
- Temperature Unit °F/°C Selectable
- MAX/MIN (°F/°C) Memory recalling function
- Time setting
- Time alarm/Snooze Setting
- 12/24 Hour Format
- 3 meters Sensor Wire with Probe for fridge inside Temperature Measurement
- Flip Out Stand at Back of Unit
- Battery: 1 x 1.5 volts "AAA" size
- Comes with calibration certificate



SPECIFICATIONS:

Measurement range	-50°C ~ +70°C or -58°F ~ +158°F
Accuracy	±1°C or ±1.8°F in the range of -20°C ~ +70°C
Resolution	0.1° for whole range



DIGITAL THERMOMETER MODEL CC4650-000 INSTRUCTIONS

SPECIFICATIONS

Measurement range: $-50^{\circ}\text{C} \sim +70^{\circ}\text{C}$ or $-58^{\circ}\text{F} \sim +158^{\circ}\text{F}$
Accuracy: $\pm 1^{\circ}\text{C}$ or $\pm 1.8^{\circ}\text{F}$ in the range of $-20^{\circ}\text{C} \sim +70^{\circ}\text{C}$
Resolution: 0.1° for whole range

OPERATION

Open the battery door, insert battery into compartment. Close the battery door. The unit is ready for use now
- **°F/°C:** Press "F/C" AT THE BACK OF THE CC4650-000 to select desirable temperature unit.







- Maximum and Minimum Memory Recalling Function

- 1- Press "MAX/MIN" to recall minimum temperature. **MIN** sign shows on the display.
- 2- Press again to recall maximum temperature when necessary. **MAX** sign shows on the display.
- 3- Unit restores to real time temperature mode automatically after 5 seconds.
- 4- Press and hold for 3 seconds to clear all maximum and minimum reading at once

- Time Setting

- 1- Press "SET" for 3 seconds to enter time setting mode. Digits at the lowest row flash.
- 2- Press "HOUR", and "MINUTE" respectively to adjust desired time.
- 3- Press "SET" to return to real time mode. Or unit returns to real time mode automatically after 5 seconds.

-Alarm/Snooze Setting

- 1- Press "AL/SNZ" and hold until **AL** sign appears. And 0:00 (HH:MM) or last setting shows.
- 2- Press "HOUR", and "MINUTE" respectively to adjust desired alarm time.
- 3- Press "AL/SNZ" again to activate the alarm and  sign appears. The alarm is on only when  sign appears.
- 4- Press "AL/SNZ" again to activate the snooze and **SNZ** sign appears. The snooze is on only when SNZ sign appears.
- 5- Press "SET" after Setting desired alarm time. Or unit returns to real time mode automatically after 5 seconds.
- 6- When the set alarm time reaches,  sign flashes and the alarm sound will last for 1 minute.
- 7- Press any key to stop the alarm.
- 8- When the snooze is on, **SNZ** sign flashes and the alarm sound will last for 1 minute after 10 minutes of alarm time. The snooze sounds will repeat 5 times.
- 9- To turn off the alarm, press "AL/SNZ" and hold until **AL** and  sign appear. Press "AL/SNZ" again and  sign disappeared. The alarm is off when  sign disappeared.

- 12/24 Hour Format

Press "12/24" to select desired time format.

- **NOTE: THIS THERMOMETER HAS NO TEMPERATURE ALARMS. IF YOU NEED, PLEASE, SEE OUR MODEL CC4648-000**